

GEO 84Z WM

Desk or wall mounting alphanumeric pager



features


- Wall or desk mounting
- Powered by mains PSU with internal re-chargeable battery
- Loud audible alert
- LED's for power, low battery, emergency, out of range and unread message
- Selectable Character Height, 3 or 6 mm
- 20,000+ Character Memory
- Hand Program Frequency & Address
- Urgent Call (emergency) Alert Mode with LED indication
- External antenna

Desktop Convenience

The GEO84Z WM is the pager with a difference. Designed to be desk or wall mounted, it provides superior alerting capabilities with its large 4 line/8 line screen, bright LED's and loud audible alert. Power is supplied by PSU/charger and internal rechargeable back-up battery.



8 line mode (3 mm text height)

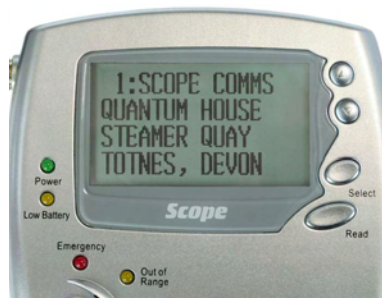

4 line mode (6 mm text height)

GEO 84Z WM

Wall / desk mounting
alphanumeric pager


Specification

Display:	Small font: 21 char x 8 lines Large font: 17 char x 4 lines
Addresses:	8 addresses (individually selectable Off/ Tone/Numeric/ Alpha)
Messages:	60 messages, up to 20,000+ characters
Size:	75 (L) x 51 (W) x 18 (D) mm
Weight:	65g (with batt)
Frequency ranges:	Synthesized 454- 460 MHz
Signalling protocol:	POCSAG
Data transmit rate:	512, 1200 or 2400 baud
Power:	2 x AAA NiMh battery + AC adaptor

Operation is simple and unfussy.
All functions are selectable by icons
clearly displayed on the big screen.

Main features

- **Address & frequency hand programmable (password protected)**
- **Storage:** Repeat message rejection: optional 1,2,5,10 minutes or disabled
- **Low Battery indicator LED**
- **Out of Range (NO Service) Indicator LED**
- **Unread Message Indicator LED**
- **Alert Modes:** Vibrate, Tone, Quiet Tone & Mute
- **Alert Length:** 8, 16 or 32 seconds programmable
- **Urgent (emergency) Call indicator LED**
- **Real Time Clock with Alarm**

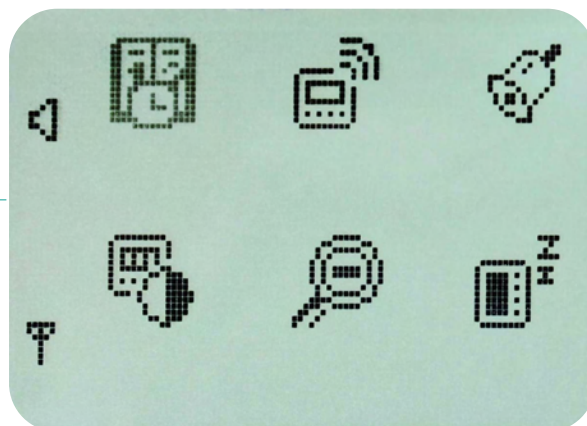

Scope Communications UK Ltd
Quantum House
Steamer Quay
Totnes, Devon, TQ9 5AL
England

Tel: +44 (0)1803 860700
Fax: +44 (0)1803 863716
Website: www.scope-uk.com
Email: sales@scope-uk.com

© Scope Communications Uk Ltd.
All specifications subject to change. E & OE.